

Machine Drivers

Current Driver
Omnitech Fanuc - IJArcsIN
⌵

	Items	Current Value	Unit
⊕	Driver Description		
⊕	Driver Parameters		
⊕	ToolChanger		
⊖	Drill Bank		
	Has drill bank	<input checked="" type="checkbox"/>	
	Edit drill bank	Click to edit	⋮
⊕	Driver Speeds		
⊕	Driver Units		
⊕	Communication parameter		
⊕	Advanced Parameters		

Define Drill Bank (Boring Machine)

Number:

Spacing tolerance:

Optimization Method:

No.	Drill tool	X:	Y:	Z:
2	No tool	1.25980	0.00000	0.00000
3	No tool	2.51970	0.00000	0.00000
4	No tool	3.79940	0.00000	0.00000
5	No tool	5.03930	0.00000	0.00000
6	No tool	5.03930	1.25980	0.00000